

# FORMAX<sup>®</sup>


---

ColorMaxLP2

Digital Color Label Printer

SET-UP/OPERATOR MANUAL  
UNWINDER

The ColorMaxLP2 unwinder is used to unwind the labels on rolls with a 2" internal diameter. The maximum external roll diameter allowed is up to 250 mm (10") while the maximum label width is up to 240 mm (9.45").


An external power supply 100/240VAC - 2.5A at 24V  allows an electronic circuit to provide, through the tension arm, the speed and sense of rotation auto adjustment.

## **INSTALLATION**



### **STEP 1**

Using the screws, install the outer disc on the unwinder core holder.

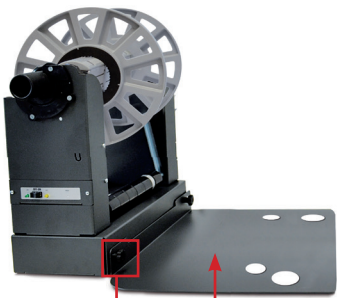

### **STEP 2**

Attach the printer plate to the unwinder. Do not fasten the knobs for the moment.



### **STEP 3**

Place the printer on the plate using the guide rails.




#### **STEP 4**

Load the media roll and outside disk then tighten the knob.



#### **STEP 5**

Push the media under the tension arm and then feed it into the printer (look at the printer's manual how to load media).

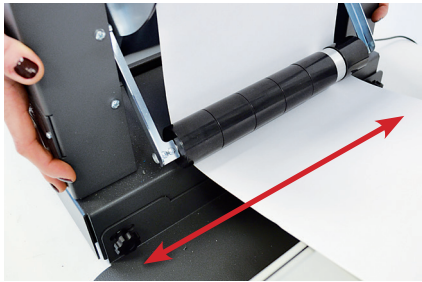

#### **STEP 6**

Make sure to align the unwinder with the printer.

Next, install the rewinder unit.